



Installation instructions for RS fence


 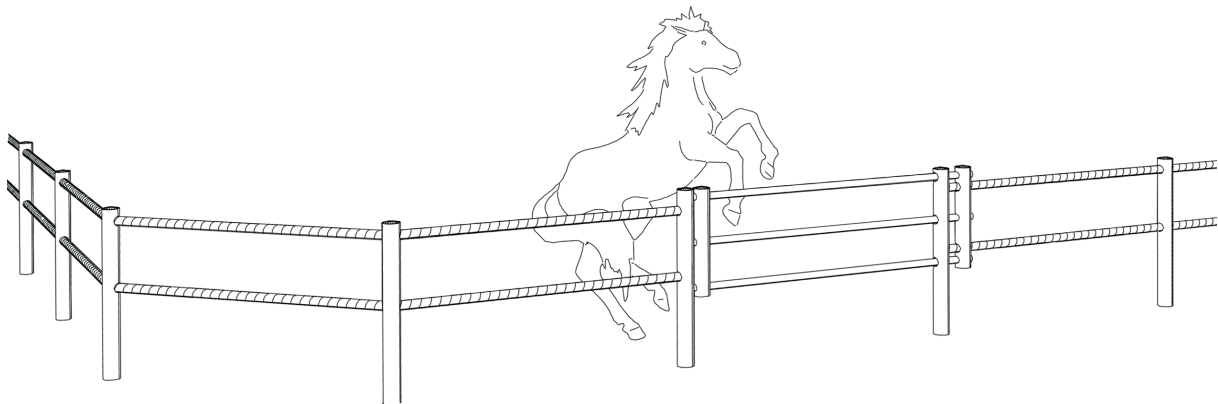


- All posts are mounted at a distance of 1.67 meters from the center.
- Corner posts are drilled with holes 90 ° or 135 ° depending on the type of corner.
- Gate posts are drilled with 5 holes towards the fence side and 3 holes towards the gate opening.
- In the case of a double gate, a ground bracket is mounted for the center post, the ground bracket is a black pipe with a diameter of 160 mm, the center post is drilled with 3 holes in both directions.

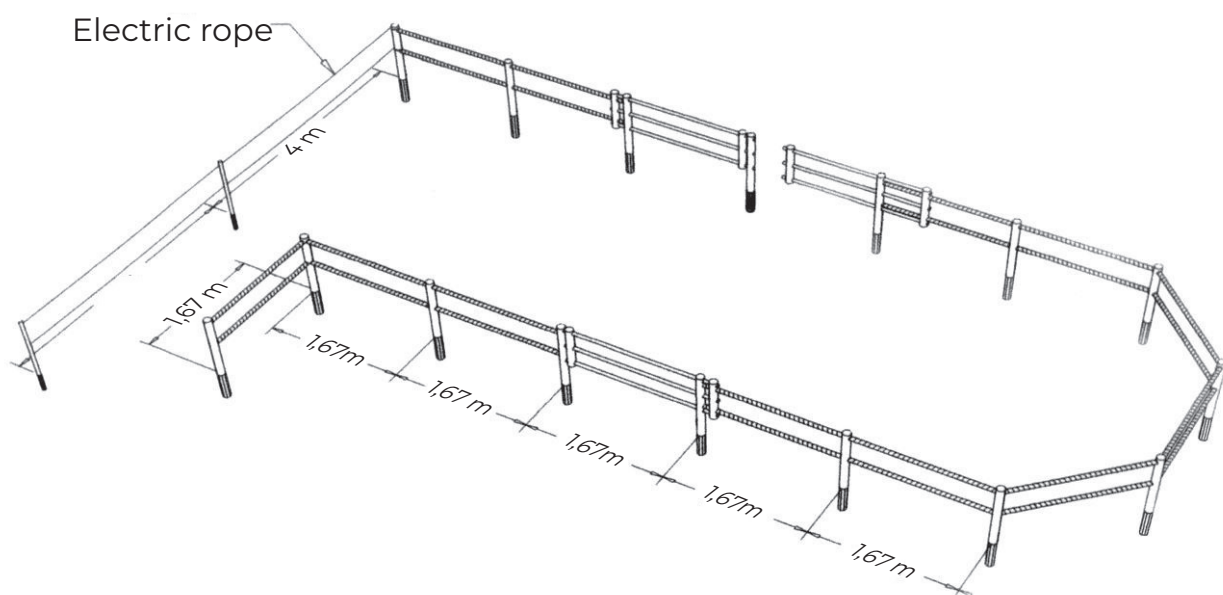


Assembly of posts

- The height of the post is 1.25 m above the ground for our RS fence and 1.55 m above the ground for the RS DeLuxe fence
- Installation depth of the RS fence is 60 cm. Installation depth for the RS fence Deluxe is 70 cm
- When assembling our fence, a soil auger is needed.
- Recommended earth drill diameter 200 mm, but drills with diameters down to 150 mm and up to 250 mm can be used.
- Drill holes and put out the corner posts.
- Tighten a guideline between the corner posts and measure out the holes.
- Drill other holes.

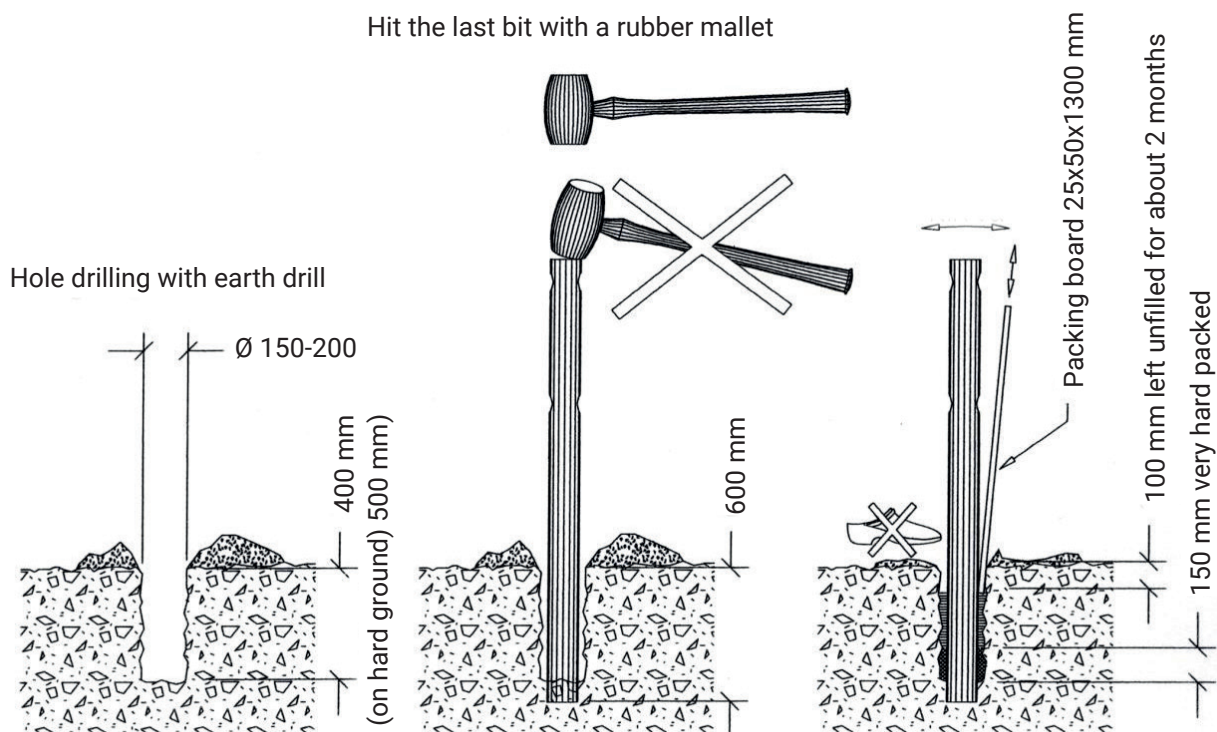


Assembly of rails

- The rail is 5,05 m long. 5 cm is cut off during assembly, so the assembly length of the rail is 5,0 m. As much as possible, avoid cutting the rail more as it affects the stability of the fence.
- Start the assembly in a corner and mount the lower hose all the way, do not forget to leave a distance of 10 - 30 mm between the rails because the rails shrink in the winter and expand in the summer.
- At + 20 ° leave 10 - 15 mm distance, at 0 ° 15 - 20 mm and at -10 ° 20 - 30 mm.
- When drilling holes for the pin, be careful not to drill into the electrical wire. A sprint extension is included which you can reach down to the lower lane with.


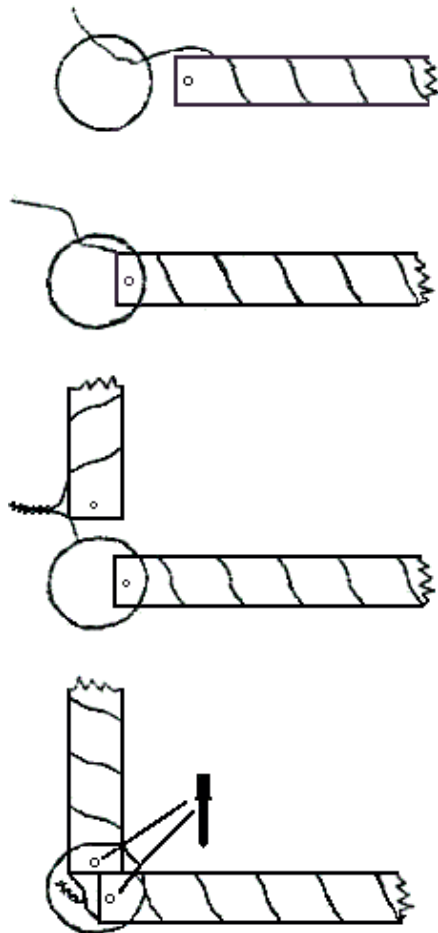




- Loosen the electrical wire one turn on the cable.
- Drill a 14 mm hole 10 - 15 mm into the hose.
- Pull the electrical wire through the pole.
- Insert the sling into the post.
- Sprint inside the post.
- Pass through a new sling in the next post.
- Loosen the electrical wire one turn on the cable.
- Drill a 14 mm hole 10 - 15 mm into the hose.
- Twist the electrical wires together well.
- Insert the electric torches into the pole.
- Insert the sling into the post and sprint.
- Pull out the sling 10 - 30 mm.
- Connect the electric wires between the upper and lower wire, preferably take a piece of wire from a leftover part or use the same type of


Installation of gate

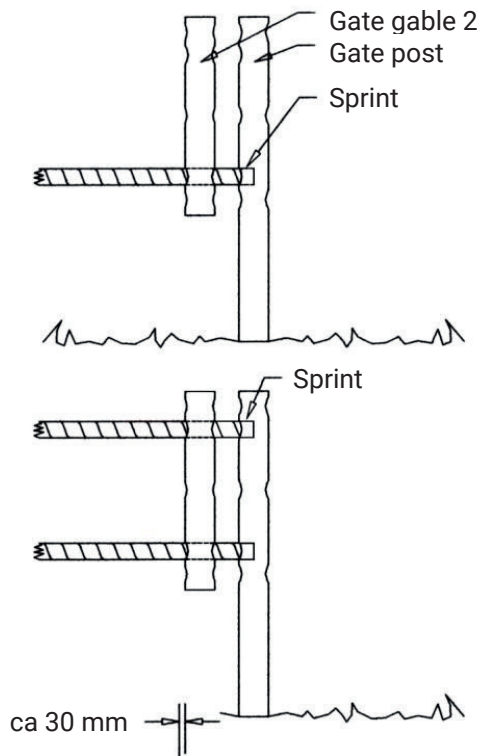

- Tree on gate end 2 on the lower sling.
- Attach the lower sling to the gate post.
- Tree on gate end 2 on the upper slat.
- Attach the upper hose to the gate post.
- Attach the center gate cable to gate end 1.
- Attach the lower and upper gate cable to gate end 1.
- Make sure that the measurements are kept according to the pictures, a 5 meter hose differs in length depending on temperature, at -20 ° it is approx. 30 mm shorter than at +30 °.
- Attach the lower gate rope to gate end 2.
- Attach the upper gate rope to gate end 2.
- Check the function of the gate and all dimensions.

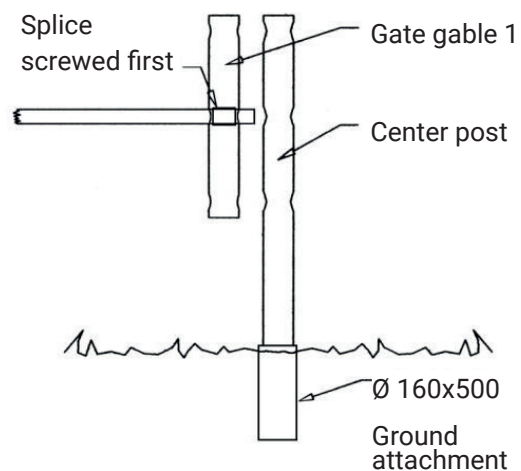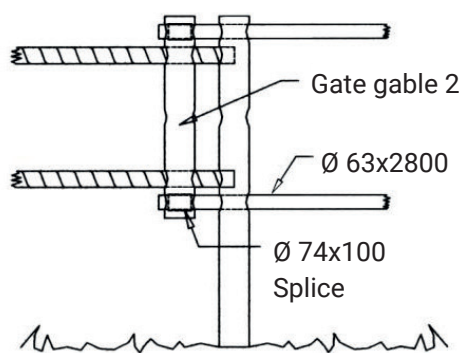

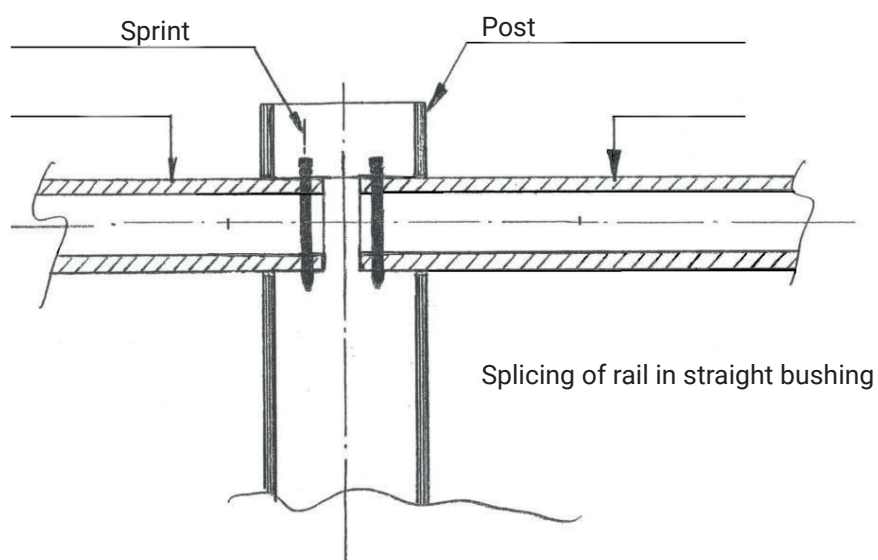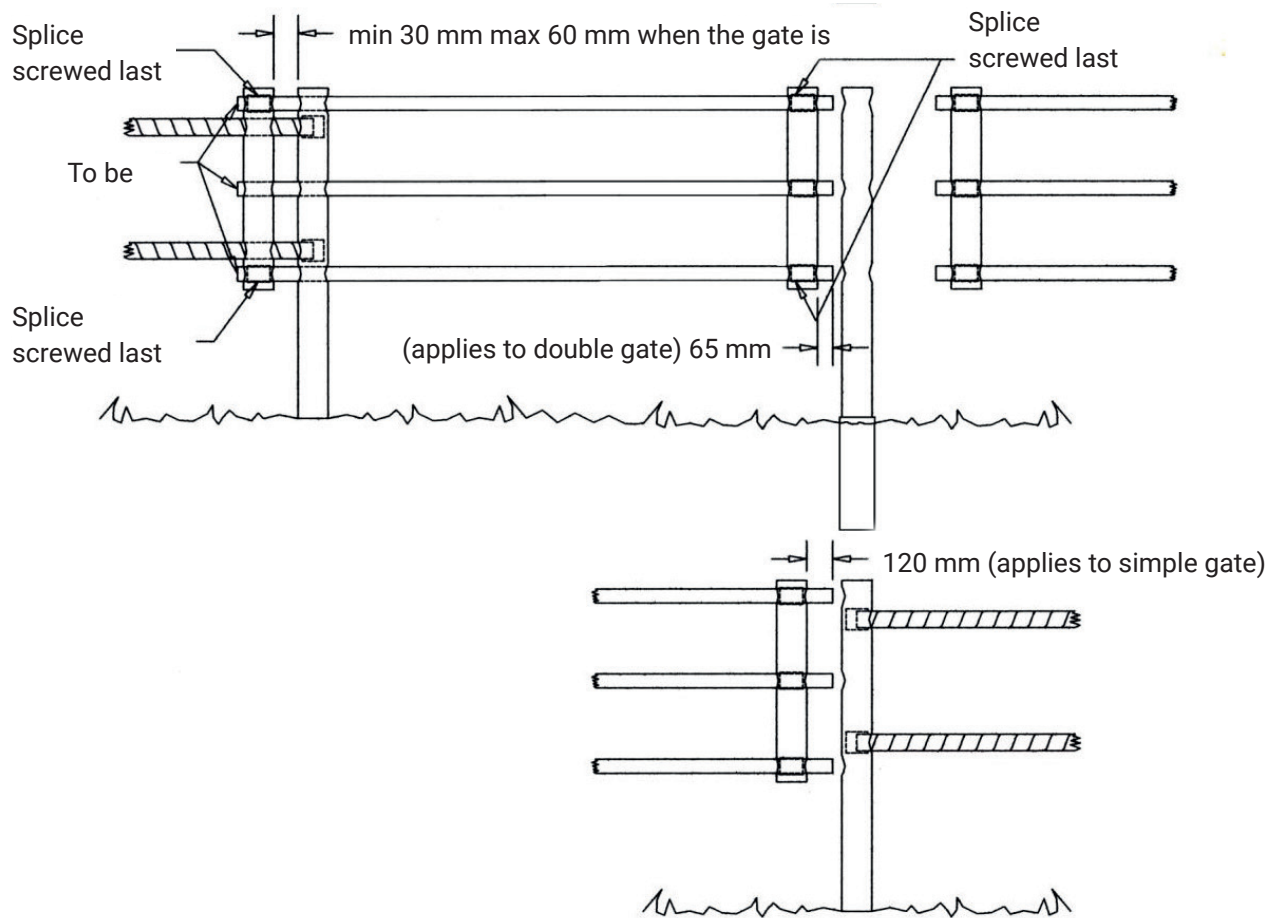

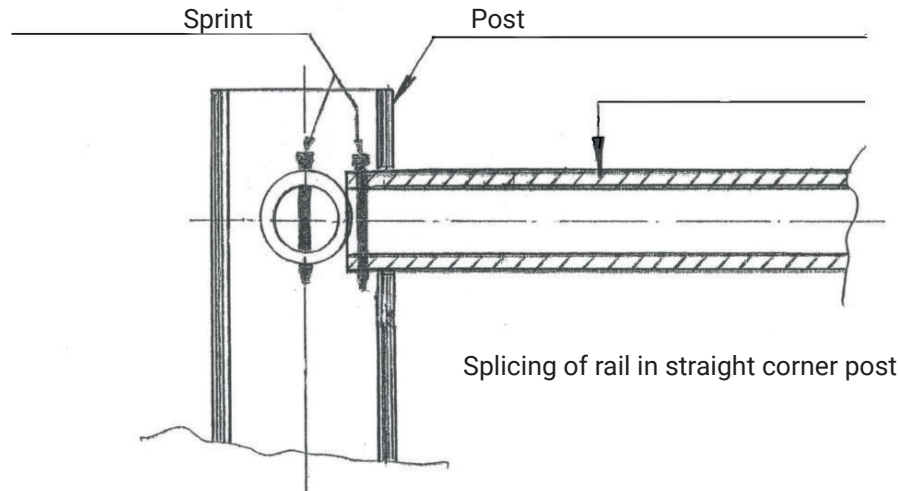

Material properties:

The RS fence is made of polyethylene HD and has very good properties for a fence, it does not crack and is resistant to sunlight, weather and wind. If you drive on the fence with, for example, a tractor, the post and sling will fold, but it is almost always possible to repair it without having to replace damaged parts .

Maintenance:

- On an ongoing basis, you should check that there is always current on the fence and take action if e.g. some horse kicked out a sling.
- Every year the fence needs to be inspected, the frost may have pushed up a pole, remove objects that lean towards the fence, e.g. branches and grass.
- Check that there is always current on the fence.

Well maintained, the RS fence can fulfill its function and be an ornament for an entire man's life in the future.